
Terminal Type Installation Guide

Three Stage Power Settings (MH & MSH Types)

To utilize the three stage power settings (high, medium, and low power) for MH and MSH type Fin PTC Air Heaters, refer to the illustrations below for power source and switch connections.

For three stage power adjustment, adjust ON/OFF settings of switch 1 and 2 according to the power settings table below.

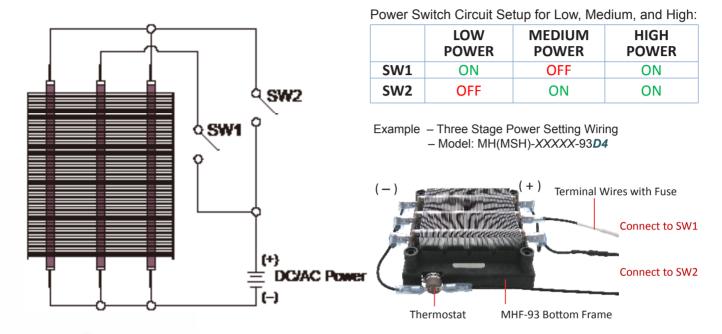

Two Stage Power Settings (SH & TH Type)

SH and TH type Fin PTC Air Heaters consist of two aluminum tubes and therefore can be adjusted in two power settings by connecting individual switches on each aluminum tube connector. Refer to table below for two stage power adjustment setting:

